

# BENCHMARK<sup>TM</sup> MC

## 2IN1 AIR FLOOR NAILER



5 Year Limited Warranty

**READ ALL INSTRUCTIONS BEFORE FIRST USE.  
KEEP THIS MANUAL FOR FUTURE REFERENCE.  
KEEP AWAY FROM CHILDREN.**



**WEAR CSA APPROVED  
EYE PROTECTION**



**WEAR EAR  
PROTECTION**



**WEAR A  
FACE MASK**

## PRODUCT SPECIFICATIONS

<b>2IN1 AIR FLOOR NAILER</b>	
Magazine capacity	L Cleats: 100pcs, Staples: 90pcs
L-Cleats	16 gauge 1-1/2 inch to 2 inch
Staples	15.5 Gauge 1-1/2inch to 2 inch Long
Maximum pressure	115 psi
Working pressure	70 psi – 115 psi
Air consumption	4.6 CFM@90PSI
Air inlet	1/4-inch NPT
Minimum hose size	1/4 inch
Weight	9.6 lbs. 4.4kg


•Please note (where the 1/4" NPT connector is not already installed on the tool) your tool may be shipped with a black plastic cap installed in the air inlet. Pry the cap out prior to installing the 1/4" NPT connector.

### NEED ASSISTANCE?

Call us on our toll-free customer support line:

1-866-349-8665 (Monday through Friday 9am – 5pm Eastern Standard Time)

- Technical questions
- Replacement parts
- Parts missing from package.

 Note these instructions pertain to the tool only. Please refer to your compressors operator manual and follow the manufacturers instructions.

## TABLE OF CONTENTS

Product Specifications ..... 1  
Table of Contents ..... 2  
Safety Guidelines ..... 3-6  
Symbols ..... 7  
Tool specific Warnings.....8  
Know your Floor nailer .....9  
Assembly and Operating ..... 10-15  
Maintenance and troubleshooting ..... 16-18  
Exploded View ..... 19  
Parts List .....20-21  
Warranty..... 22

## SAFETY GUIDELINES

### **WARNING:**

This manual contains information that relates to PROTECTING PERSONAL SAFETY and PREVENTING EQUIPMENT PROBLEMS. It is very important to read this manual carefully and understand it thoroughly before using the product. The symbols listed below are used to indicate this information.



### **DANGER!**

Potential hazard that will result in serious injury or loss of life.



### **WARNING!**

Potential hazard that could result in serious injury or loss of life.




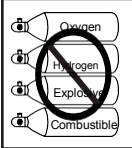







### **CAUTION!**

Potential hazard that may result in moderate injury or damage to equipment.

**Note** - The word " Note " is used to inform the reader of something he / she needs to know about the tool.

### **PERSONAL SAFETY**

These precautions are intended for the personal safety of the user and others working with the user. Please take time to read and understand them.

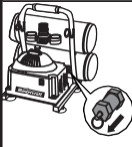SYMBOL	MEANING
	<ul style="list-style-type: none"> <li>• <b>Do not use oxygen or any other combustible or bottled gas</b> to power air-powered tools. Failure to observe this warning can cause explosion and serious personal injury or death. Use only the compressed air to power the air-powered tools. Use a minimum of 25' (7.6 m) of hose to connect the tool to the compressor. Failure to comply will result in serious injury or loss of life.</li> </ul> 
	<ul style="list-style-type: none"> <li>• <b>Risk of electric shock:</b> Do not expose a compressor to rain. Store it indoors. Disconnect the compressor from power source before servicing. Compressor must be grounded. Do not use grounding adapters.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Risk of personal injury:</b> Do not direct compressed air from the air hose towards the user or other personnel.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Risk of inhalation:</b> Never directly inhale the air produced by the compressor.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Risk of bursting:</b> Do not adjust the pressure switch or safety valve for any reason. They have been preset at the factory for this compressor's maximum pressure. Tampering with the pressure switch or the safety valve may cause personal injury or property damage.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Risk of burns.</b> The pump and the manifold generate high temperatures. In order to avoid burns or other injuries, do not touch the pump, the manifold, or the transfer tube while the compressor is running. Allow the parts to cool down before handling or servicing. Keep children away from the compressor at all times.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Risk of bursting:</b> Make sure the regulator is adjusted so that the compressor outlet pressure is set lower than the maximum operating pressure of the tool. Before starting the compressor, pull the ring on the safety valve to make sure the valve moves freely. Drain water from tank after each use. Do not weld or repair tank. Relieve all pressure in the hose before removing or attaching accessories.</li> </ul> 

## DANGER!



- **Keep children away** from the work area. Do not allow children to handle power tools.
- **Do not use this tool in the presence of flammable liquids or gases.** Sparks that are created during use may ignite gases.
- **Keep air hose away** from heat, oil, and sharp edges. Check air hose for wear before each use and ensure that all connections are proper.
- **Always ensure that the workpiece is firmly secured** leaving both hands free to control the tool.
- Always ensure that the tool has stopped before putting it down after use, for safety purposes and to prevent possible damage to the tool/user.
- **Keep proper footing at all times in order to ensure correct balance.**
- **Always assume that the tool contains fasteners.**
- **Do not point the tool toward yourself or anyone else.**

## WARNING!



- **Do not allow unskilled or untrained individuals to operate** the air tool.
- **Do not use the tool for any task other than that it is designed to perform.**
- **Locate the compressor in a well-ventilated area** for cooling, and a minimum of 12" (31 cm) away from the nearest wall.
- **Protect the air hose and the power cord from damage and puncture. Inspect them for weak or worn spots every week** and replace them if necessary.
- **Always wear hearing protection** when using the air compressor. Failure to do so may result in hearing loss.
- **Do not carry the compressor while it is running.**
- **Do not operate the compressor if it is not in a stable position.**
- **Do not operate the compressor on a rooftop or an elevated position** that could allow the unit to fall or be tipped over.
- **Always replace a damaged gauge** before operating the unit again.
- **Do not connect the tool to a compressed air source with a pressure output that is higher than 115psi.**


## CAUTION!




- **Always ensure that the tool has stopped before disconnecting the air supply.**
- **Do not wear watches, rings, bracelets, or loose clothing** when using any air-powered tool.
- **Do not overload the tool.** Allow the tool to operate at its optimum speed for maximum efficiency.
- Do not use a tool that is leaking air, that has missing or damaged parts, or that requires repairs. **Verify that all screws are securely tightened.**
- For optimal safety and tool performance, **inspect the tool before every usage**, in order to ensure free movement of the trigger, safety mechanisms, and springs.
- **Always keep your air tool clean and lubricated.** Daily lubrication is essential to avoid internal corrosion and possible failures.
- **Ensure the floor is not slippery** and wear non-slip shoes. Floors should be kept clean and clear.
- **Always follow all workshop safety rules, regulations, and conditions** when using the tool and keep the work area clean.
- **Carry the tool by the handle only**, keeping fingers away from the trigger. Do not carry the tool by the hose, magazine, or any other parts.
- **Do not use the tool near or below freezing point**, as doing so may cause tool failure.
- **Do not store the tool in a freezing environment** to prevent ice formation on the tools operating valves, as doing so may cause tool failure.
- **Handling and storage of oil:** Use with adequate ventilation. Avoid contact of oil with eyes, skin, and clothing. Avoid breathing spray or mist. Store in a tightly closed container in a cool, dry, well-ventilated area free from Incompatible substances.
- **Tripping hazard.** The air hose may become a tripping hazard when it is placed in the work area. Use care when walking in the work area.

**CAUTION!**

- **Disconnect tool from the air supply and turn off the compressor** before performing any maintenance or changing accessories, when clearing a jammed fastener, when the tool is not in use, when it is being handed to another person, and when it is left unattended. Failure to comply may result in moderate injury or damage to equipment.

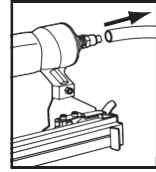


- **Use safety goggles and ear protection:** Wear safety glasses with side shields when operating the tool/compressor and verify that others in the work area are also wearing safety glasses. Safety glasses must conform to American National Standards Institute (ANSI Z87. 1) requirements and must provide protection from flying particles from the front and the sides. Air-powered tools are loud, and the sound can cause hearing damage. Always wear ear protection to prevent hearing damage and loss. Failure to comply may result in moderate injury.

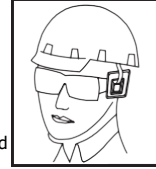

**Note:** Recycle unwanted materials rather than disposing of them as waste. Sort the tools, hoses, and packaging in specific categories and take to the local recycling centre or dispose of in an environmentally safe way.

## SYMBOLS

 **WARNING:** Some of the following symbols may appear on the tool. Study these symbols and learn their meaning. Proper interpretation of these symbols will allow for more efficient and safer operation of this tool.

## SYMBOLS



Read operator's manual: To reduce the risk of injury, user must read and understand operator's manual before using this product.



Risk to hearing Always wear ear protection when using this tool. Failure to do so may result in hearing loss.



Eye protection: Always wear safety goggles, safety glasses with side shields, or a full-face shield when operating this product.



## TOOL SPECIFIC WARNINGS



**DANGER** Potential hazard that will result in serious injury or death.


- Do not keep the tool pressed while loading fasteners.
- Do not disconnect or reconnect the air hose with the tool pressed or with a fastener in the guide. The tool may fire when it is reconnected to the air supply.



**WARNING** Potential hazard that could result in serious injury or death.


- Keep hands and other parts of the body away from the nail guide during use. Keep hands and feet and all other parts of the body at least 8" (20cm) away from the firing head.
- Objects in the workpiece can cause serious injury if they cause the fasteners to be deflected or to be driven away from the point of entry.
- Do not drive fasteners on top of a fastener. The fastener may ricochet, causing serious personal injury.
- Do not drive fasteners on scaffoldings, ladders, or such similar construction.
- Use only fasteners of the proper size and gauge, as specified in this manual.
- Do not drive fasteners close to the edge of the workpiece. The workpiece may split which could allow the fastener to fly free or ricochet and cause serious personal injury.

## KNOW YOUR FLOOR NAILER

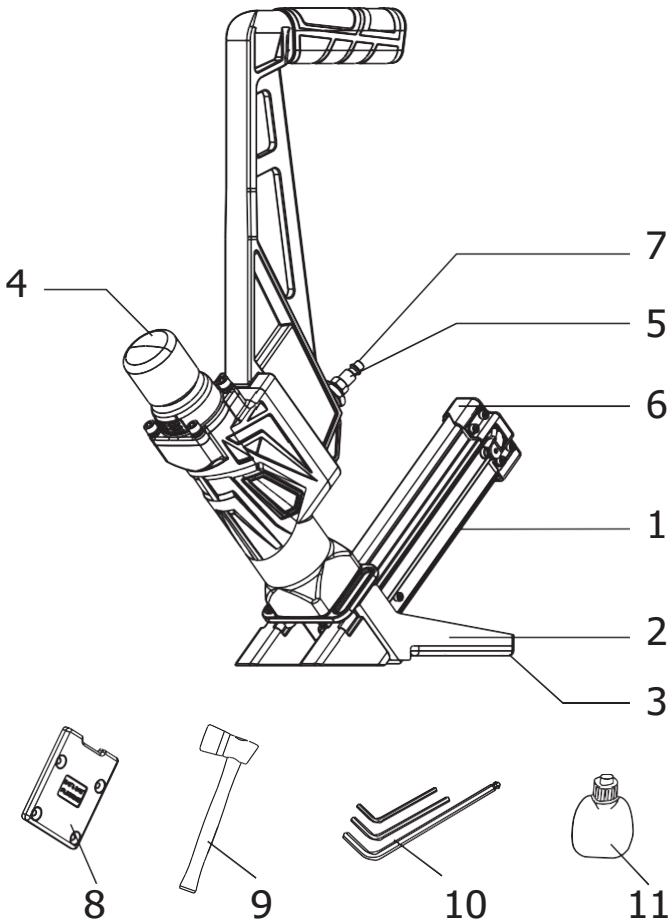

### FUNCTION

- |                    |  |
|--------------------|--|
| 1. Magazine        | 7. Dust shield   |
| 2. Shoe            | 8. Shoe plate<br>(for floor boards 5/8" & 9/16" thick) |
| 3. Shoe plate 3/4" | 9. Mallet  |
| 4. Hammer cap      | 10. Hex wrench   |
| 5. Air inlet plug  | 11. Lubrication oil                                    |
| 6. Magazine latch  |  |

**WARNING:** Risk of serious personal injury: Never place hands  or any other body parts in the fastener discharge area of the nailer, the tool might eject a fastener, and could result in death or serious personal injury.

## ASSEMBLY AND OPERATING

This 2 in 1 air floor nailer drives both 15.5-gauge crown staples 1-1/2" - 2" long (38-50mm) with 1/2" (12.7mm) crown, crown staples and 16-gauge "L" shaped cleats from 1-1/2"-2" in length (38mm- 50mm) in length. It includes a die-cast aluminum housing that delivers a strong and lightweight design, even during extended use. The ergonomically designed long handle allows for easy operation. It has two interchangeable base plates to support a variety of flooring thicknesses. It also features a hardened drive blade for longer life, and economic air consumption with low noise. This 2 in 1 air floor nailer is specifically designed for installing hardwood flooring.

## COMPATIBLE COMPRESSORS


### GUIDELINES FOR PROPER USE AND OPERATION

Be sure to use a proper air compressor with air-powered tools. The compressor should be able to supply a minimal air delivery of 4.56 CFM @ 90 PSI to ensure the compressor can run continuously with the 2 in 1 air floor nailer.

Air Compressor Size and Power	1 1/2-2 HP	2 1/2 HP	3+ HP
4-5 Gallons	Light-duty and Intermittent use	Light-duty and Intermittent use	Light-duty and Intermittent use
6-11 Gallons	Light-duty and Intermittent use	Medium-duty and Intermittent use	Medium-duty and Intermittent use
15+ Gallons	Medium-duty and Intermittent use	Heavy-duty and Continuous use	Heavy-duty and Continuous use

## AIR SYSTEM

Always use clean, dry, regulated, compressed air at 4.8 to 7.93 bar (70 to 115 PSI)  
Do not exceed the maximum or minimum pressures. Operating the tool at the wrong pressure (too low or too high ) will cause excessive noise or rapid wear of tool.

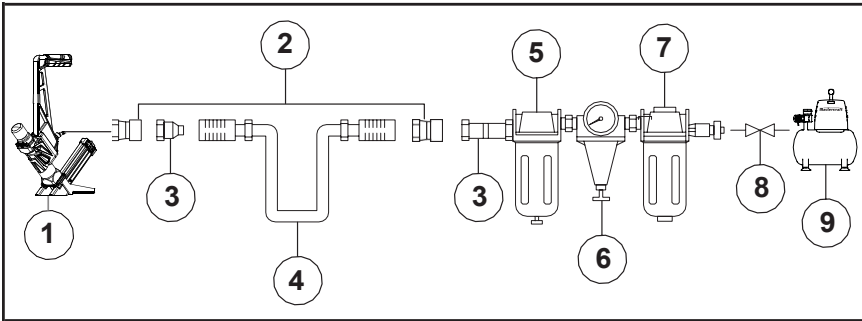

No.	Description	No.	Description
1	2 in 1 air floor nailer	6	Regulator 0-123 PSI (0-8.5 bar)
2	Quick connector	7	Filter
3	Quick coupler	8	Cut-off valve
4	Air hose	9	Air compressor
5	Lubricator		

This 2 in 1 air floor nailer accepts the following size and type of fasteners.

## ACCEPTABLE FASTENERS



Staples (15.5 gauge)

Crown: 1/2" (12.7mm)

Length: 1 1/2-2" (38-50mm)

L-Shaped cleats/nails (16 gauge)

Length: 1 1/2-2" (38-50mm)

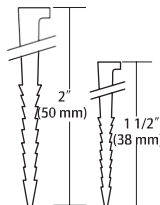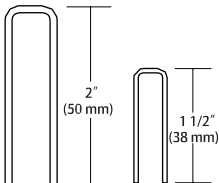

## NAIL TYPE ICONS

These icons are used to select the proper nails for this specific nailer.

### COMPATIBLE NAILS/STAPLES: CLOUS/AGRAFES COMPATIBLES :



NAIL SIZE:  
TAILLE :  
1 1/2-2"



NAIL SIZE:  
TAILLE :  
1 1/2-2"

**⚠ WARNING** The use of any other types of fasteners will cause the tool to jam. Failure to comply could lead to serious injury or loss of life.

It is recommended that a filter-regulator-lubricator is used and located as close to the tool as possible.

If a filter-regulator-lubricator is not installed, place up to 3-5 drops of pneumatic tool oil into the NPT inlet plug before each use.

If a filter-regulator-lubricator is installed, keep the air filter clean. A dirty filter will reduce the air pressure to the tool, which will cause reduction in power, efficiency, and general performance.

For optimal performance, install a quick coupler in the hose, if applicable.

Verify that all the connections in the air supply system are sealed in order to prevent air from leaking.

## Air tools

### Read this Instruction Manual carefully before using the tool.

Read and follow all the safety instructions at the beginning of this manual. Inspect the air-powered tool prior to each use to:

-Ensure that the proper power source is being used.

-Verify that the tool is in proper working order.

-Verify that the air pressure level (s) are properly set on the air compressor. Do

not use the tool if it is not in proper working order.

Do not use oxygen, CO<sub>2</sub> (carbon dioxide) or any other combustible, or bottled gas to power this tool.

Do not use this tool in the presence of any flammable liquids or gases.

Keep hands and other parts of the body away from the firing head during use.

Do not point the tool towards the operator or other people.


Never attempt to clear a jammed fastener while the air hose is connected.

Do not drive a fastener on top of an existing fastener. Failure to comply could lead to serious injury or death.


## Loading fasteners

**⚠ WARNING** Disconnect the tool from the compressed air source before loading fasteners. Do not point the tool towards the operator or other people while changing fasteners. Do not hold the tool with the trigger depressed while changing the fasteners. Failure to comply will lead to serious injury or loss of life.


1. Disconnect the tool (1) from the air supply (2) (fig. A).

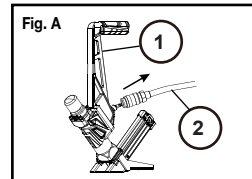

2. Take hold of the 2 in 1 air floor nailer firmly with one hand. Use the other hand to press the latch (1) and pull the magazine cover backward. Make sure you have the right nails for your tool (see page 11). Insert a strip of fasteners (2) into the magazine. Ensure that the points of the fasteners are facing down (Fig. B).

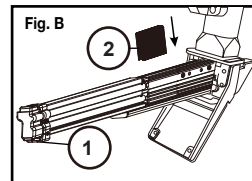



3. Push the magazine cover forward, until it locks into position (Fig. C).

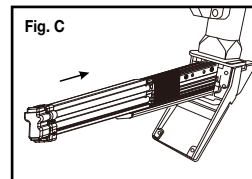

## Operating the tool

**⚠ DANGER** Do not operate the tool if the fasteners are not loaded-doing so may damage the tool. Do not fire fasteners into the air - doing so may cause injury to the operator or others and damage the tool. Load the correct type of fasteners only. Do not load different sized fasteners into the magazine-doing so may cause fasteners to jam. Failure to comply will lead to serious injury or loss of life. The nailer releases one fastener with each hit, so hitting the whack cap twice will project a second fastener onto the first one which could cause a potential ricochet hazard. Ensure that the hammer exerts enough force on the nailer. If the force is too low, the fastener will not be inserted completely onto the flooring. For nails that are not completely inserted, use a hammer to pull out the nail or knock the nails in with a nail setter. Do not attempt to drive a fastener into the same location twice.


1. Plug in compressor, turn it on, set the pressure regulator to 90 PSI, and attach one end of the air hose to the compressor and the other end of the air hose (1) to the tool (2). Use plumber's tape to avoid air leaks (Fig. D).
2. Hold the handle securely and press the base plate against the work surface, making sure the plate is over the fastener target position. Press down hard so that the base plate is firmly contacting the work surface. Swing the mallet and strike the top end of the hammer cap (Fig. E).

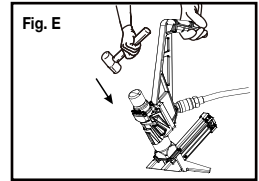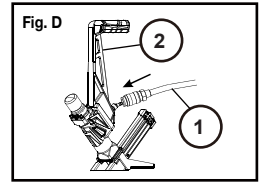

## Changing the base plate

The tool is equipped with a pre-installed base plate for 3/4" boards and an additional uninstalled base plate for 5/8" & 9/16" thick boards. To change the base plate:


1. Disconnect the tool from the air supply.
2. Empty the magazine completely.
3. Using the hex key (J), set the tool on its side to expose the four screws and remove them by turning counter - clockwise.
4. Attach the desired plate (see Fig. F). Ensure the screw holes on the base plate line up with the holes at the nailer shoe (C).
5. Secure the base plate to the tool using the three screws.

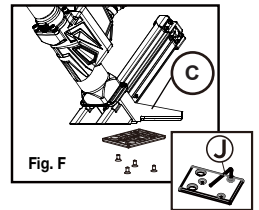

## Insertion Methods


### L cleats (Fig. G):

1. Connect the tool to the air source.
2. Press down on the latch button (F). Pull the magazine cover (D) back to the end of the magazine.
3. Place full clip of desired fasteners into magazine from the side. Up to 100 cleat nails can be loaded into magazine. Be noted that, when loading the L cleat nails, the side with the L head should be in the left of the magazine pusher (E).
4. Push the magazine cover (D) forward until magazine pusher (E) pops up.

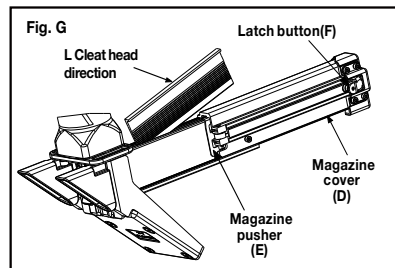

## Staples (Fig. H):


1. Connect the tool to the air supply.
2. Press down the latch button ( F ), the pull the magazine cover ( D ) back to the end of the magazine.
3. Place a full clip of 1 / 2 in. Crown staples in the magazine from the top. Up to 90 staples can be loaded into magazine.
4. Push the magazine cover ( D ) forward until the magazine pusher ( E ) pops up.

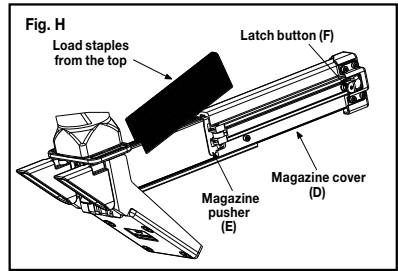

## To clear a jammed fastener

Occasionally, fasteners may become jammed in the firing mechanism of the tool, making the tool inoperable. To remove a jammed fastener, follow the steps below:

1. Disconnect the tool from air source.
2. Empty the magazine. Make sure all fasteners are removed.
3. Try to fire the tool into a piece of scrap wood or flooring to make sure that it's incapable of firing any fasteners.
4. Set the tool on its side to expose the nose bolts ( J ).
5. Remove nose bolts ( J ) and driver guide ( K ) to expose the jammed fastener.
6. Remove jammed fastener, using plier or a screwdriver if required.
7. Replace the driver guide ( K ) and nose bolts ( J ).
8. Reconnect tool to the air source, then reload the tool with fasteners.
9. Press the drive guide ( K ) against a piece of wood, and test fire the fasteners several times to check for proper operation. If the tool is properly firing, you may continue using the tool. If the tool fails to perform properly, immediately discontinue use and have the tool repaired by a qualified service technician.

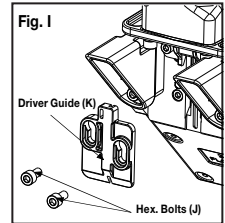

**CAUTION** Make sure there is no fastener in the magazine before clearing a jam.

## Storage

If it is necessary to store the tool for an extended period of time, apply a generous amount of lubrication before storing. The tool should be allowed to run for approximately 30 seconds after lubricating, in order to ensure that the lubrication is uniformly distributed throughout the tool.



## Maintenance


**Note:** Do not store the tool anywhere temperatures will fall below freezing.

**⚠ DANGER** Disconnect the tool from the air compressor before maintenance/service, adjusting, cleaning jams, reloading, and when it is not in use. Repairs must be performed by a qualified service technician only. Failure to comply will lead to serious injury or loss of life.

MAINTENANCE REQUIRED	DESCRIPTION	TOOLS OR MATERIALS REQUIRED	MAXIMUM SERVICE INTERVAL		
			Each use or every 2 hrs	Monthly	As needed
In-depth inspection	Worn or broken parts			X	X
Replace worn or broken parts					X
Lubrication	See below	Pneumatic tool oil	X		

Lubrication: If the 2 in 1 air floor nailer and the compressor are not equipped with an in-line lubrication system, fill 2 to 3 drops of pneumatic tool oil into the air inlet before each use or after every 2 hours of continuous use, depending on the characteristics of the workpiece and type of fasteners used. Air-operated tools must be inspected periodically, and worn or broken parts must be replaced to ensure that the tools are operating safely and efficiently.

Inspect and replace worn or damaged O-rings, seals, etc. Tighten all screws and caps frequently in order to help prevent personal injury. Keep the magazine of the tool clean and free of any dirt or abrasive particles.

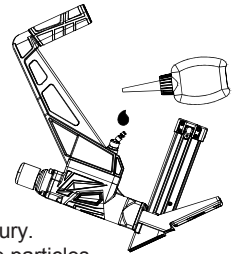

## Troubleshooting

**⚠ DANGER** If any of the following symptoms appear while the tool is in use, turn it off and disconnect it from the air supply immediately. Failure to comply will lead to serious injury or loss of life.  
 Disconnect the tool from the air supply before making any adjustments.  
 Repairs must be performed by a qualified service technician only.


The following chart lists common operating system issues and solutions.  
 Please read it carefully and follow all instructions carefully.

- Disconnect the tool from the air supply before making any adjustments.
- Repairs and replacement must be performed only by a qualified service technician or in an authorized service centre.

Problem	Possible causes	Solutions
Air leakage near the bottom of the tool.	<ol style="list-style-type: none"> <li>1. Screws are loose.</li> <li>2. The O-rings or the bumper is/are damaged.</li> </ol>	Contact a qualified service technician: <ol style="list-style-type: none"> <li>1. To tighten the screws.</li> <li>2. To inspect and replace the O-rings or seals.</li> </ol>
Air leakage between the body and the cylinder cap.	<ol style="list-style-type: none"> <li>1. Screws are loose.</li> <li>2. The O-rings or the seals are worn or damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten the screws.</li> <li>2. Inspect and replace the O-rings or the seals.</li> </ol> Have the tool serviced by a qualified service technician.
The fasteners are being driven too deep.	<ol style="list-style-type: none"> <li>1. The bumper is worn.</li> <li>2. The air pressure is too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the bumper.</li> <li>2. Adjust the air pressure.</li> </ol>
The tool does not operate properly. - it does not drive the fasteners or operates sluggishly.	<ol style="list-style-type: none"> <li>1. The air supply is inadequate.</li> <li>2. Lubrication is inadequate.</li> <li>3. The O-rings or seals are worn or damaged.</li> <li>4. The exhaust port in the cylinder head is blocked.</li> </ol>	<ol style="list-style-type: none"> <li>1. Verify that the air supply is adequate.</li> <li>2. Pour up to 6 drops of oil into the air inlet.</li> <li>3. Inspect and replace O-rings or seals. Have the tool serviced by a qualified service technician.</li> <li>4. Replace the damaged internal parts. Have the tool serviced by a qualified service technician.</li> </ol>

Problem	Possible causes	Solutions
<p>The tool skips fasteners.</p>	<ol style="list-style-type: none"> <li>1. The bumper is worn, or the spring is damaged.</li> <li>2. There is dirt in the front plate.</li> <li>3. Fasteners cannot move freely in the magazine because of dirt or damage.</li> <li>4. The O-ring on the piston is worn or dry or there is not enough lubrication.</li> <li>5. The cylinder cover seal is leaking.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the bumper or pusher spring. Have the tool serviced by a qualified service technician.</li> <li>2. Clean the drive channel inside the front plate.</li> <li>3. Clean the magazine.</li> <li>4. Replace the O-ring.</li> </ol> <p>Have the tool serviced by a qualified service technician.</p> <ol style="list-style-type: none"> <li>5. Replace the sealing washer.</li> </ol> <p>Have the tool serviced by a qualified service technician.</p>
<p>The tool jams.</p>	<ol style="list-style-type: none"> <li>1. Fasteners are incorrect or damaged.</li> <li>2. The driver guide is damaged or worn.</li> <li>3. The magazine screw is loose.</li> <li>4. There is dirt in the magazine.</li> </ol>	<p>(See section "Cleaning a jammed fastener").</p> <ol style="list-style-type: none"> <li>1. Use the proper fasteners.</li> <li>2. Inspect and replace the driver.</li> <li>3. Tighten the magazine.</li> <li>4. Clean the magazine.</li> </ol>

## EXPLODED VIEW

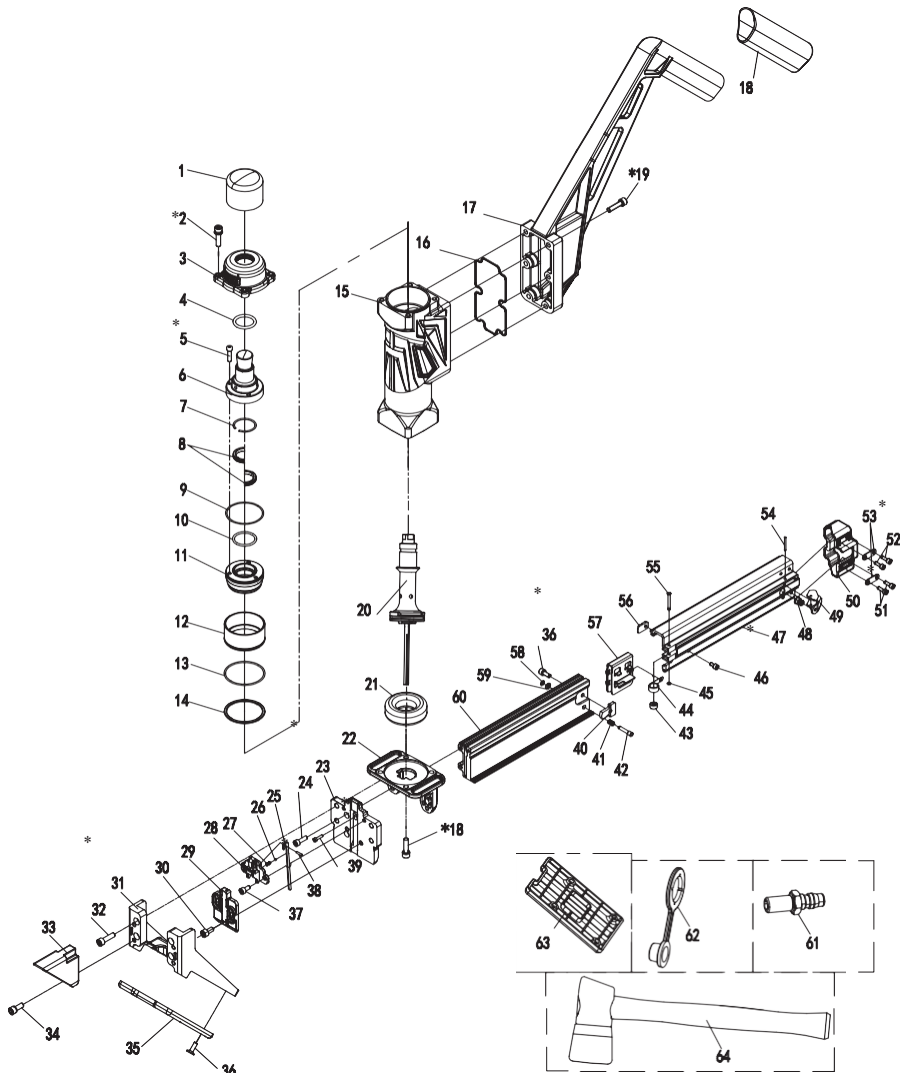

## PARTS LIST

**⚠ WARNING** When servicing, use only original equipment replacement parts. The use of any other parts may create a safety hazard or cause damage to the tool. Any attempt to repair or replace electrical parts on this tool may create a safety hazard unless repairs are performed by a qualified technician. For more information, call the Toll-free Helpline, at 1-866-349-8665.

**Always order by PART NUMBER, not by key number.**

Key #	Part #	Part Name	Quantity
1	1282-004-001	Hammer Face	1
2	1282-004-002	Screw Set	4
3	1282-004-003	Air Cap	1
4	1282-004-004	O-ring	1
5	1282-004-005	Screw Set	3
6	1282-004-006	Actuator	1
7	1282-004-007	Retainer Ring	1
8	1282-004-008	Lock Ring	2
9	1282-004-009	O-ring	1
10	1282-004-010	O-ring	1
11	1282-004-011	Actuator Ling Ring	1
12	1282-004-012	Body Ling Ring	1
13	1282-004-013	O-ring	1
14	1282-004-014	Air Cap Seal	1
15	1282-004-015	Body	1
16	1282-004-016	Handle Seal	1
17	1282-004-017	Handle	1
18	1282-004-018	Hand Grip	1
19	1282-004-019	Screw Set	10
20	1282-004-020	Drive Blade Units	1
21	1282-004-021	Bumper	1
22	1282-004-022	Connector	1
23	1282-004-023	Nose	1
24	1282-004-024	Hex Bolt	2
25	1282-004-025	Cleat Guide Rib	1
26	1282-004-026	Steel Ball	1
27	1282-004-027	Spring	1
28	1282-004-028	Spacer	1
29	1282-004-029	Drive Blade Guide	1
30	1282-004-030	Hex Bolt	2

Key #	Part #	Part Name	Quantity
31	1282-004-031	Nose Plate	1
32	1282-004-032	Hex Bolt	4
33	1282-004-033	Supporter	2
34	1282-004-034	Screw Set	4
35	1282-004-035	Shoe Plate	1
36	1282-004-036	Screw Set	4
37	1282-004-037	Hex Bolt	3
38	1282-004-038	Pin	2
39	1282-004-039	Hex Bolt	1
40	1282-004-040	Stopper	1
11	1282-004-041	Spring	1
42	1282-004-042	Pin	1
43	1282-004-043	Guide Wheel	1
44	1282-004-044	Pusher Spring	1
45	1282-004-045	O-ring	1
46	1282-004-046	Hex Bolt	1
47	1282-004-047	Inner Magazine	1
48	1282-004-048	Spring	1
49	1282-004-049	Latch Unit	1
50	1282-004-050	Magazine Cover	1
51	1282-004-051	Hex Bolt	2
52	1282-004-052	Hex Bolt	2
53	1282-004-053	Magazine Cover Plate	2
54	1282-004-054	Pin	1
55	1282-004-055	Pin	1
56	1282-004-056	Washer	1
57	1282-004-057	Pusher	1
58	1282-004-058	Open Ring	1
59	1282-004-059	Flat Washer	1
60	1282-004-060	Outer Magazine	1
61	1282-004-061	Air Plug	1
62	1282-004-062	Anti-Dust Cap	1
63	1282-004-063	Shoe Plate	1
64	1282-004-064	Mallet	1

## **WARRANTY**

### **BENCHMARK WARRANTY**

If this Benchmark tool fails due to a defect in material or workmanship within five years from the date of purchase, return it to any Home Hardware store with the original bill of sale for exchange. 3-year warranty for the battery and charger. This warranty does not include expendable parts including but not limited to blades, brushes, belts, light bulbs. This warranty covers defects in material or workmanship only. It does not cover normal wear and tear, failure due to abuse/misuse, or defects caused by careless or accidental mishandling. If this Benchmark product is used for commercial or rental purposes, this warranty does not apply.

# 2IN1 AIR FLOOR NAILER



5 Year Limited Warranty

**BENCHMARK**<sup>TM</sup>  
MC

**BENCHMARK TOOLS CANADA**  
ST. JACOBS, ONTARIO N0B 2N0  
© 2021 Home Hardware Stores Limited

**CUSTOMER SERVICE/TECH SUPPORT**  
1-866-349-8665

**1282-004**

Made in China



\*This Benchmark<sup>TM</sup> product carries a five (5) year LIMITED warranty against defects in workmanship and materials. The charger and batteries carry a three (3) year LIMITED warranty. See Owner's manual for full details.

**READ ALL INSTRUCTIONS BEFORE FIRST USE.  
KEEP THIS MANUAL FOR FUTURE REFERENCE.  
KEEP AWAY FROM CHILDREN.**



**WEAR CSA APPROVED  
EYE PROTECTION**



**WEAR EAR  
PROTECTION**



**WEAR A  
FACE MASK**